


packing list


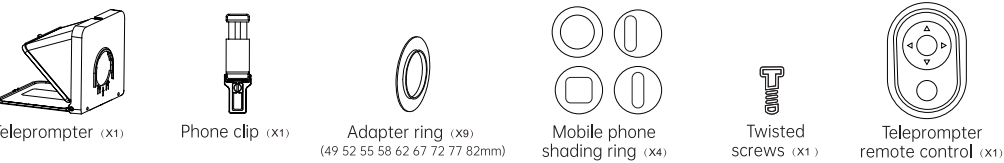


Teleprompter remote control / Compatible with multiple teleprompter software Compatible with Android and Apple system

Steps for usage



- 1: Download the corresponding mobile phone prompting APP software in the application store
- 2: Turn on the Bluetooth remote control and find the Bluetooth device named " TCQI " to connect

Different visors are suitable for different mobile phone lenses

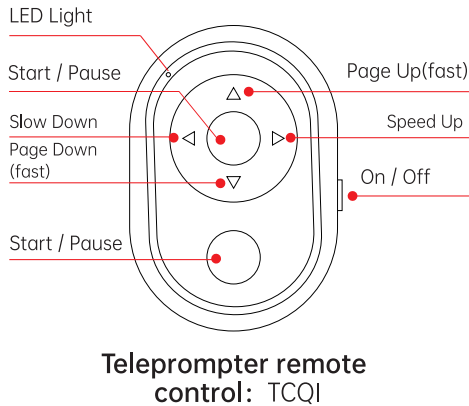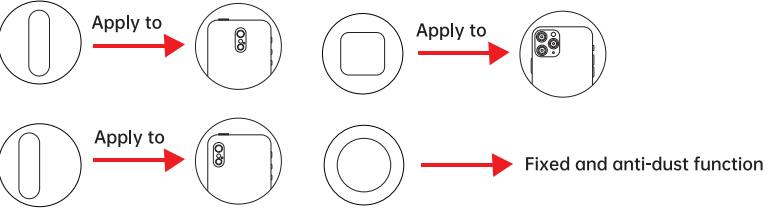


Product use steps


Mobile phone connection steps (two ways)

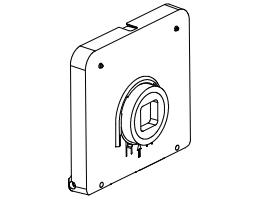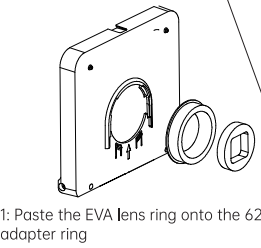

The rendering of the phone lens cover installed

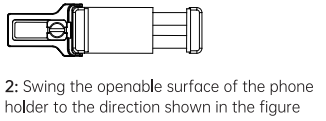


Method 1: Put the phone vertically

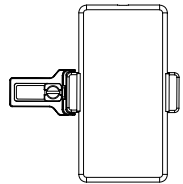


1: Paste the EVA lens ring onto the 62MM adapter ring

Method 2: Place the phone horizontally

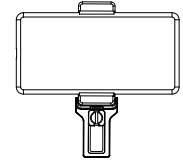


2: Swing the openable surface of the phone holder to the direction shown in the figure

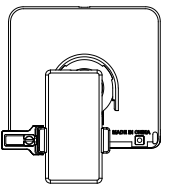

3: Clamp the phone vertically to the phone holder with the lens facing upwards

4: Assemble the phone holder to the rear case and lock the screws, adjust the phone holder left and right Direction so that the phone lens is aligned with the EVA hole

5: Turn on the phone camera, turn on the video mode, and adjust the focus

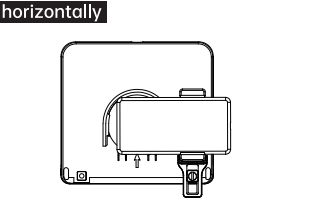

6: Tear off the protective film on the base of the teleprompter, and place the teleprompter phone/tablet here

Note: If the front flip and mirror function is turned on, you need to pay attention to the orientation of the phone/tablet, and don't reverse it.

Teleprompter APP download



【Android users】

- Method 1: Open the Android browser, then scan the QR code, choose "Ordinary Download".
- Method 2: Search "TCQI" on Google play



Users of HarmonyOS 5.0, please download the [TCQI Teleprompter] from the Huawei AppGallery.




【Apple users】

Search [TCQI] on App Store




Product use steps


Camera connection steps

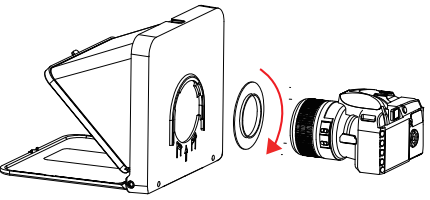


1: Lock the appropriate adapter ring to the lens

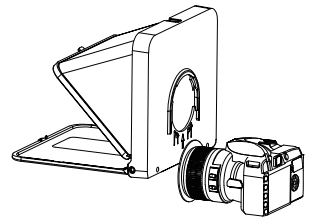

2: Slide the camera lens ring from the bottom of the teleprompter into the card slot

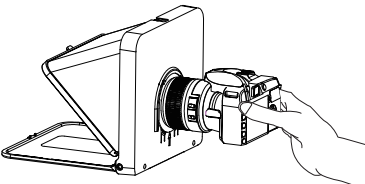


3: After adjusting the camera lens, put the phone on the bottom of the teleprompter

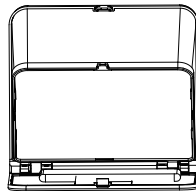


4: Tear off the protective film on the base of the teleprompter, and place the teleprompter phone/tablet here

Note: If the front flip and mirror function is turned on, you need to pay attention to the orientation of the phone/tablet, and don't reverse it.

Camera disassembly steps

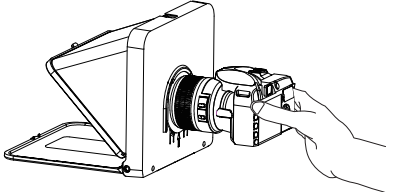

1: Rotate to remove the camera

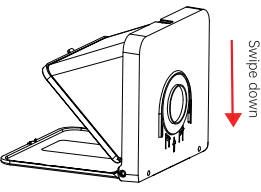

2: Slide the camera adapter ring down to remove